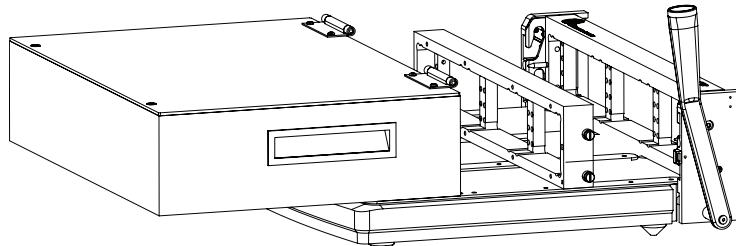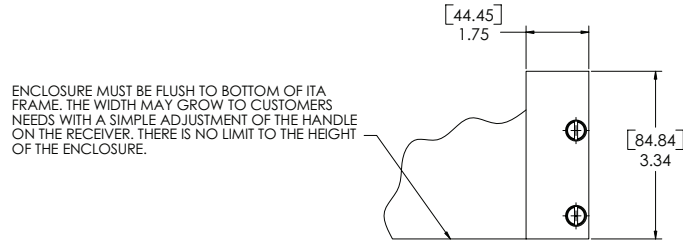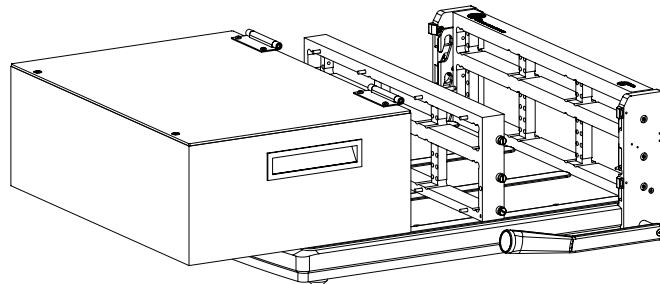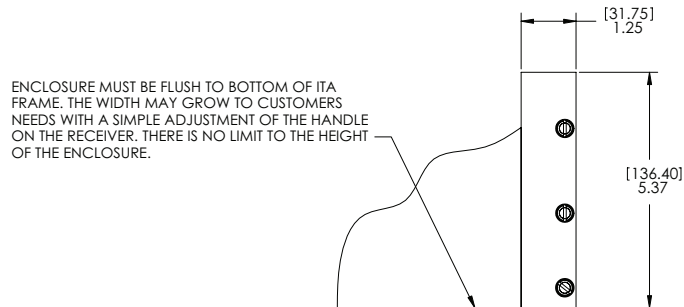# Tech Tips: Custom G12 & G12x Enclosure Requirements

Enclosures must be flush with the ITA bottom to ensure the proper function of the G12 & G12x systems.

ENCLOSURE MUST BE FLUSH TO BOTTOM OF ITA FRAME. THE WIDTH MAY GROW TO CUSTOMERS NEEDS WITH A SIMPLE ADJUSTMENT OF THE HANDLE ON THE RECEIVER. THERE IS NO LIMIT TO THE HEIGHT OF THE ENCLOSURE.

[44.45]
1.75

[84.84]
3.34

G12 Enclosure (ITA Part # 410 104 322)

ENCLOSURE MUST BE FLUSH TO BOTTOM OF ITA FRAME. THE WIDTH MAY GROW TO CUSTOMERS NEEDS WITH A SIMPLE ADJUSTMENT OF THE HANDLE ON THE RECEIVER. THERE IS NO LIMIT TO THE HEIGHT OF THE ENCLOSURE.

[31.75]
1.25

[136.40]
5.37

G12x Enclosure (ITA Part # 410 104 474)